


Volkswagen > New Beetle > 1998 - 2005
General Body Repairs, exterior
55 - Hood

Release lever, removing and installing

Removing

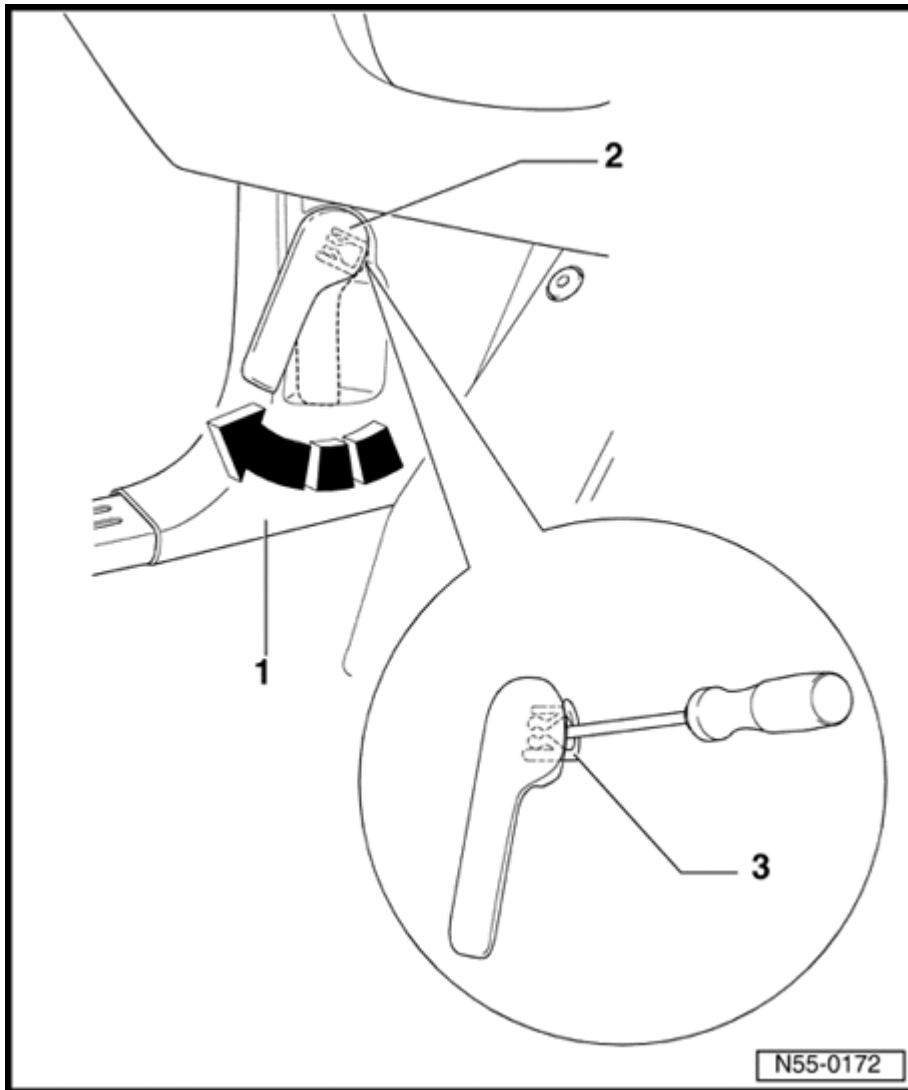

1 - Lower A panel trim

◆ Removing and installing ⇒ General body repairs, interior - Repair Group 70

◆ Removing and installing (Convertible) ⇒ General body repairs, interior - Repair Group 68

2 - Release lever

◆ Removing:

- Pull release lever approx. 2 cm.
- Insert a small screwdriver in gap between release lever and clip --.
- Release release lever again and unclip clip from release lever (clip drops behind the trim).

◆ Installing:

- Engage clip -- completely in the release lever.
- Then press the release lever into the mounting in the bearing bracket.
- Check function before closing hood.

3 - Clip